



硕方  
SUPVAN

Organized, Simple, Done.

# SUPVAN

## LP5120M Label Printer User Manual






User Manual

### Declaration:


- For any information about the instruction contents, Supvan reserves the right to vary because of the upgrade of the printer.
- Supvan will not be responsible for any consequence caused by operations which do not follow the requirements of manual.
- If you want to know more about the printer or Supvan, please visit: [www.supvan.com.cn](http://www.supvan.com.cn).

# 1 Label Printer and Label Tape

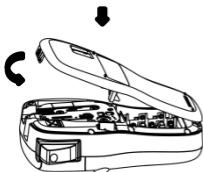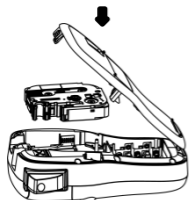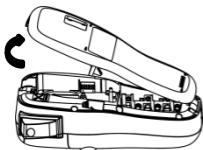


**Tips**  
**Before loading tape, Please tighten ribbon first!**


Manually rotate the ribbon in the direction of the arrow to rewind the ribbon until the ribbon is straight.

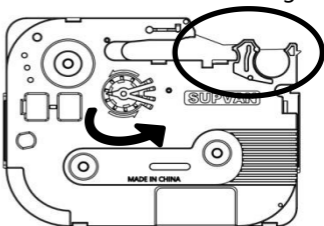

If the label is curved, be sure to straighten the label and tighten the ribbon.

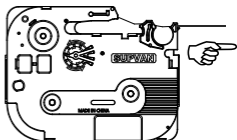

# 2 Power/Battery

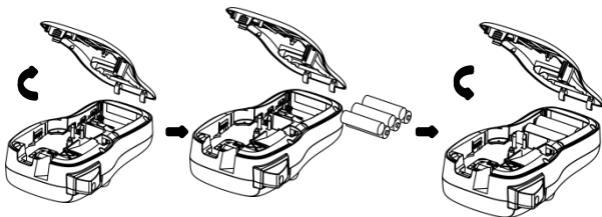


Note

□ AA ALKALINE LR6: Optional.


### 3 LCD and Keyboard

#### 1) LCD Display

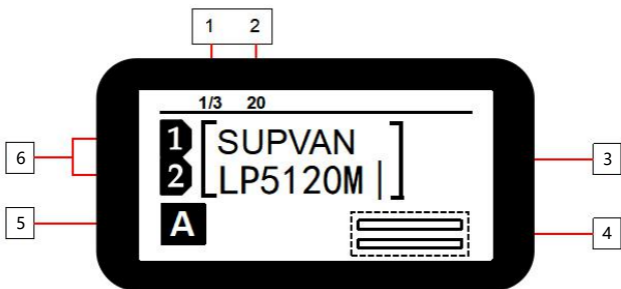





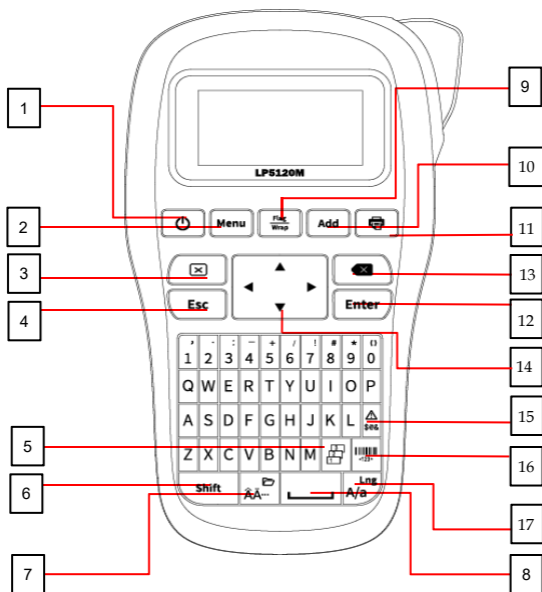




No	Content	Discription
1	Page	Current label position/Total number of labels ; Current editing label/Total number of editing label;
2	Length	Specify length value ; If select " Auto" length,then display "A" ;
3	Interface	Edit content for two lines of display; Each line can display letters/numbers up to 12 characters;
4	Preview	Flag and wrap labels are available for preview;
5	A/a	A----Capital letter input; a----Small letter input;
6	Line No	The number of lines that have been created  6mm width label tape can create 2 lines of content; 9mm width label tape can create 3 lines of content ; 12mm width label tape can create 3 lines of content;

## 2) Keyboard Layout



No	Name	No	Name			
1	【 ⏻ 】	10	【 Add 】			
2	【 Menu 】	11	【 🖨️ 】			
3	【 ☒ 】	12	【 Enter 】			
4	【 Esc 】	13	【 ⬡ X ⬡ 】			
5	【 <table border="1" style="display: inline-table; vertical-align: middle;"><tr><td>3</td></tr><tr><td>2</td></tr><tr><td>1</td></tr></table> 】	3	2	1	14	【 ⬅️ ⬆️ ⬇️ ⬇️ ⬆️ ➡️ 】
3						
2						
1						
6	【 Shift 】	15	【 ⚠️ ! \$@& 】			
7	【 ÅÄ  】	16	【  +123* 】			
8	【  】	17	【 <sup>Lng</sup> A/a 】			
9	【 Flag/Wrap 】					

### 3) Keys Function Introduction

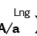Name	Function Description
【 ⏻ 】	Long press to turn on, Press to turn off ;
【 Menu 】	Function menu;
【 ✕ 】	Delete text; Delete text and format;
【 Esc 】	Suspend print; Cancel set and return to the previous interface;
【  】	Sequence print;
【  】	Change variant of the Latin letter, Long press to “File”;
【  】	Space;
【 Flag/Wrap 】	Flag label and wrap label set;
【 Add 】	Create new label;
【  】	Print;
【 Enter 】	Confirm;
【  】	Delete the content before the cursor;
【  】	Move the cursor 【 Shift 】 + 【 ▲ 】 / 【 ▼ 】 or Long press 【 ▲ 】 【 ▼ 】 check the label that have been created; 【 Shift 】 + 【 ◀ 】 / 【 ▶ 】 or Long press 【 ◀ 】 / 【 ▶ 】 Move the cursor to the beginning or end of the current label ;
【  \$@& 】	Symbol;
【  -123- 】	Create barcode;
【  A/a <sup>Lng</sup> 】	Long press to language select ; Capital letter and small letter switch;

## 4 Create General Label

[ ] is the name of the button, 《 》 is display content.

### 1 Turn on and Turn off

Long press [ (1) ] 2 second,  
Printer turn on.  
Press [ (1) ] , Printer turn on.

### 2 System language

Long press [ <sup>Lng</sup> A/a ] You can select  
system language.  
Switch capital letter and small letter.

### 3 Create multiple lines

After input the first line content,  
Press [Enter] Then create a new line.

### 4 Add new label

This printer can add 20 pcs label  
at most each time.  
After edit the first label, Press  
[Add] then create a new label.

e.g Creat two labels, screen  
"Page" will show 2/2.

**Page**

2/2 — Number of labels  
         — Current label number

### 5 Check label

If you create multiple labels,  
check or edit the first or previous  
labels. e.g,If create 2 labels and  
check the first label like below:

● Page up

Press [Shift] + [▲] or long  
press [▲] , Screen will show  
the first labels content like below:

**Page**

1/2

● Page down

Press [Shift] + [▼] or long press  
[▼] , Screen will show the  
second label content like below:

**Page**

2/2

Note:

When editing a flag label, Press  
[Shift] + [▲] / [▼] select cell,  
Input cell area content.

### 6 Clear label content

Press [✕] delete the character  
before the cursor, delete one by  
one.

Press [✕] , You can select  
delete "Format+Text" or "Text" .

If select "Format+Text" , Delete  
all settings for the label and the  
contents of the label.

If select "Text" , Delete the text  
content of all labels.

### 7 Chain Printing

Press [Menu] , Select 《Chain  
Printing》 ;

⊥ Press [Enter] You can select  
"On" or "Off" ;

⊥ When you select "On" , After  
print will show as below:

⊥ 1. New Label  
    2. Completed

⊥ If you have not completed all edits,  
Then select 《New Label》 , Printer  
not cut, Return to the editing  
interface and edit the new label  
that you need.

⊥ If you complete all editing, Select  
《Completed》 , then finish print.

 
## 8 Lead edge

Press **【Menu】** , Select 《Lead edge》

⊥ Press **【◀】** **【▶】** Select 《No Cut》 , 《Cut》 , 《Center Model》 (Invalid in chain printing mode) , Press **【Enter】** confirm select.

⊥ Print style as follows:


⊥ 《No Cut》



⊥ 《Cut》 :




 ⊥ 《Center Model》



## 9 Input Euro-Latin Letters

The key **【AÂ<sup>E</sup>】** is used to input variant form of the Latin letters in different language inputting.

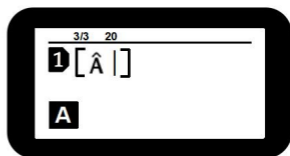

Input the English letter and press **【AÂ<sup>E</sup>】** key.

- ◆ If the letter does not have any variant form, then there will be no action.
- ◆ If the letter has variant forms, then the letter will be into selected mode, continue to press key or press **【AÂ<sup>E</sup>】** **【◀】** & **【▶】** to select the desired variant of the letter, press **【Enter】** to confirm.

## 1. Menu function introduction

Name	Introduction
"Length"	Set the label length; The default is auto; Specify length range: 20mm-200mm;
"Char size"	Set character size;
"Char width"	Set character width;
"Bold"	Set character bold or not;
"Italic"	Set character italic or not;
"Frame"	Add frame to the edited content;
"Orientation"	Set the horizontal and vertical of the label;
"Cut"	"Cut" 、 "None" 、 "Solid line" three label cutting ways can be selected;
"Chain printing"	On or off chain printing mode;
"Lead edge"	Set lead edge;

## 2. Flag label

You can make a flag label and paste it directly onto the cable. It is recommended to use a strong adhesive and non-limited label tape.

Note:  
Chain printing mode is invalid when flag label.

Press **[Flag/Wrap]**, Select **《Flag》** then you can set **《Length》**, **《Diameter》**, **《Type》**.


↓ Press **[Enter]** Enter the settings interface.

↓ After select **《Length》** press **[1-0]** number keys set the length of the flag label.


↓ Press **[▼]** select **《Diameter》**, press **[1-0]** the number key sets the diameter of the cable wrapped by the flag label.

↓ Press **[▼]** select **《Type》** Press **[▶]** **[◀]** select label type.

Type 1: **《AA:AA》**

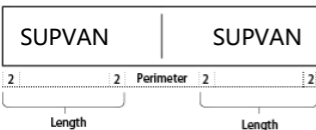

Type 2: **《AA:BB》**

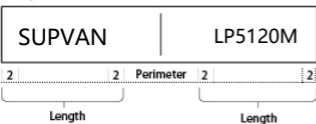

Note:

- Press **[Add]** can create multiple flag labels.
- The edited flag label can be changed by press the **[flag/wrap]** key.
- Flag label is not allowed to add barcodes.
- **《Length》** value range: 10mm-200mm.
- **《Diameter》** value range: 2mm-90mm.

## 3. Wrap label

You can make a flag label and paste it directly onto the cable. The text is printed on the label in a rotated way. It is recommended to use wrap label tape.

Note:  
Chain printing mode is invalid when wrap label.

Press **[Flag/Wrap]**, Select **《Wrap》** then you can set **《Diameter》**, **《Inverse》**, **《Repeat》**.

↓ Press **[Enter]** Enter the settings interface.

↓ Select **《Diameter》** press **[1-0]** the number key sets the diameter of the cable wrapped by the wrap label.

↓ Press **[▼]** set **《Inverse》**.

 
Inverse--- Off




Inverse-- On



↓ Press **[▼]** set **《Repeat》**  
Repeat--- Off



Repeat-- On

 


Note:

- Diameter value range: 3—90mm.
- How much of the input character in the wrap label is related to the width of the label tape.
- Press **[Add]** can create multiple wrap labels.
- The edited wrap label can be changed by press the **[flag/wrap]** key.
- Wrap labels are not allowed to specify label length.
- Wrap labels are not allowed to set horizontal and Vertical.
- Wrap label are not allowed to add barcodes.



## 4. Common Key Combination

---

【Shift】 + 【▲】	Move the cursor to the previous label or an edit area with the same label.	Cursor Move up
【Shift】 + 【▼】	Move the cursor to the next label or an edit area with the same label.	Cursor Move down
【Shift】 + 【◀】	Move the cursor to the beginning of the current label.	Home
【Shift】 + 【▶】	Move the cursor to the end of the current label.	End
【Shift】 + 【0-9】	Enter the corresponding punctuation in the upper right corner of the number key.	Punctuation
【Shift】 + 【L】	Read current label tape information.	Information
【Shift】 + 【O】	Print position, temperature, Turn off, and information advanced settings.	advanced Setting
【Shift】 + 【  】	Open、 Save、 Delete file.	File

### Note

❑ If you want to get more information , Please visit: [www. supvan. com. cn.](http://www.supvan.com.cn)

## Precautions

### Warning

- Please use a single power outlet, do not use multiple outlets that have been plugged into multiple devices, as this may cause fire or electric shock.
- Please do not let metal or liquid enter the equipment, otherwise it will cause fire or electric shock and damage internal parts, resulting in equipment damage.
- Please do not use AC power beyond 100-240V.
- Unauthorized disassembly or modification of this label printer is strictly prohibited, which may result in fire or contact caused by high voltage components.
- Please keep the label printer away from flammable solvents such as alcohol and gasoline, and keep away from fire sources.
- When cleaning the printer, use a sewed wet gauze and do not use organic flammable solvents.
- Please use the label printer in a clean place, do not use it on carpet or felt, otherwise a lot of dust will easily cause short circuit.
- This printer contains a cutter. Please use it carefully to prevent scratches.
- During use or storage, if you notice odor, heat, discoloration, deformation or any abnormal situation, immediately disconnect the power adapter, remove the battery, and stop using the device.
- Do not use batteries that are deformed or leak.
- Do not get wet with the device/power adapter/power outlet/battery. Do not plug or unplug the power plug with wet hands to prevent electric shock.
- Do not use sharp objects such as tweezers or metal pens when replacing batteries.
- Do not throw the battery into a fire or high temperature.


### Attention

- Please use the original supvan label to ensure the print quality and damage the equipment.
- If the printer caused by the use of non-original label tape is damaged, we will not be responsible for the warranty.
- Please do not touch the print head with your hands. If the printer is finished, it may cause skin burns if touched.
- When the printer is not in use for a long time, please unplug the power cable and take out the battery inside the printer to prevent the battery from leaking and damaging the device.
- Please do not press the device, do not force the keyboard with force or gravity.
- Keep away from electromagnetic interference sources that generate magnetic fields.
- When using the printer, please do not block the label outlet, so as to the label to be out smoothly.
- When using the printer, do not force the label tape out of the outlet. Please take it out after the label is cut, otherwise it will affect the print quality or damage your printer.
- This printer is very precise, please use it in a flat place to prevent it from falling and damage, and to prevent impact vibration.
- This printer and label tape should be stored at room temperature, dry, ventilated, and out of direct sunlight.
- When foreign matter enters the inside of the printer, stop using it immediately to prevent damage to the device.
- Before installing a new label tape, please tighten the ribbon to rewind the ribbon to pre-tighten the ribbon.
- When opening the "back cover", do not let any objects touch the inside of the printer.

- ❑ When using the printer, if you notice odor or abnormal noise, please turn off the label machine immediately, unplug it, and contact your dealer.
- ❑ Different speeds when printing with dry batteries or adapters.

## ● Special Attention

- ❑ If the printer outlet is found to be stuck or the cutter can not cut off label, Please clean the outside of the full cutting blade with a cotton swab soaked to ensure that the subsequent label is properly cut and removed.

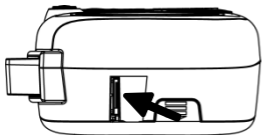

- ❑ This printer is available in 2 power modes, power adapter, 6-cell dry battery, suitable for various places.
- ❑ For more information, please visit our website of supvan: [www.supvan.com.cn](http://www.supvan.com.cn) .

# Packing List

When unpacking, please confirm that the following items in the box are in good condition. If something is damaged or missing, please contact the dealer.

<b>1</b>	<b>Label Printer LP5120M</b>	<b>1</b>
<b>2</b>	<b>Label Tape</b>	<b>1</b>
<b>3</b>	<b>User Manual(Include Qualified Certificate)</b>	<b>1</b>

# Qualified Certificate

Name/model : \_\_\_\_\_



Inspector(seal) : \_\_\_\_\_

Inspection date : \_\_\_\_\_